



A Product of Daisy® Outdoor Products • Un produit de Daisy® Outdoor Products
Un producto de Daisy® Outdoor Products

**OPERATION MANUAL
MANUEL D'UTILISATION
MANUAL DE OPERACIÓN**

**Model 426
Modèle 426
Modelo 426**

- .177 cal BB (4.5 mm) Steel Airgun Shot (S)
- 12gm CO₂ Cylinder Only
- .177 Cal BB (4,5 Mm) Tir À Partir Pistolet À Air Comprimé D'acier (S)
- Cylindre De CO₂ De 12Gm Uniquement
- .177 (4.5mm) BB calibre Bala de Acero para Arma de Aire (S)
- Únicamente Cilindro de 12 g de CO₂

**READ YOUR OPERATION MANUAL AND ALL WARNINGS BEFORE USING.
LISEZ VOTRE MANUEL D'UTILISATION ET TOUTS LES AVERTISSEMENTS AVANT TOUTE
UTILISATION.
LEA TODO EL MANUAL DE OPERACIONES Y TODAS PRECAUCIONES ANTES DE USAR.**

⚠ WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 209 YARDS (191 METERS). THIS IS A HIGH POWER AIRGUN RECOMMENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER. READ ALL INSTRUCTIONS BEFORE USING. THE PURCHASER AND USER SHOULD CONFORM TO ALL LAWS GOVERNING USE AND OWNERSHIP OF AIRGUNS.

⚠ WARNING: DO NOT BRANDISH OR DISPLAY THIS AIRGUN IN PUBLIC. IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK THIS AIRGUN IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKING TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.

⚠ WARNING: EVEN IF YOU FIRED THE AIRGUN ONE OR MORE TIMES AND NO BB IS EXPELLED, IT DOES NOT MEAN THAT THE GUN IS EMPTY OF BBs. CONTINUE TO TREAT THE AIRGUN AS IF IT IS LOADED.

⚠ WARNING: THIS GUN CAN CAUSE DEATH IF CARELESSLY USED OR MISUSED. READ AND FOLLOW THE INSTRUCTIONS CAREFULLY. DO NOT LOAD ANY BBs INTO THE GUN UNTIL YOU ARE READY TO SHOOT. IF YOU DO LOAD BBs INTO THE GUN AND THEN DECIDE NOT TO SHOOT, EITHER MANUALLY REMOVE THE BBs FROM THE GUN OR SHOOT THE REMAINING BBs AT A SAFE TARGET. AN UNLOADED, NON-PRESSURIZED GUN WHICH IS "ON" SAFETY IS SAFEST. ACCIDENTS HAPPEN FAST, AND ACCIDENTALLY INJURING OR KILLING SOMEONE IS A TERRIBLE THING. PLEASE SHOOT SAFELY.

This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of personal injury and carefully read the message that follows.

The Model 426 CO₂ PowerLine® Pistol shoots with much more muzzle energy than the traditional spring air BB gun. More power means greater chance of serious injury. Use extreme caution when operating this gun.

Although your new PowerLine® Pistol is not a firearm, it has lethal potential and should be treated with caution and respect due any conventional firearm. Always remember, the first and most important safety feature of any gun is the shooter. All safeties are mechanical devices and the shooter is the only part of the system that can make a gun safe—or unsafe. DON'T DEPEND ON MECHANICAL SAFETIES—think ahead and avoid situations that might lead to accidents.

guns differ in their operations and you are never ready to fire any gun until you are thoroughly familiar with it. Read the following operating instructions and WITHOUT LOADING A PROJECTILE, proceed through the operating steps (dry firing your gun with CO₂ only several times at a safe target.) This will enable you to learn to operate the PowerLine® 426 properly and safely.

NEVER STORE A LOADED GUN

At the end of a shooting session, as a safety precaution, always put the safety in the safe position - NO RED SHOWING, remove CO₂ cylinder, remove BBs from the gun. Store in a safe place to prevent unauthorized use.

HOW TO OPERATE

⚠ WARNING: Be sure gun is always pointed in a safe direction. Never point the gun at anyone. Always assume and treat the gun as if it were loaded and ready to fire.

Step 1. PUT "ON" SAFETY - POSITION SAFETY SO NO RED IS SHOWING.

Push the safety toward the "SAFE" position - NO RED SHOWING (Fig. 2).

In this position, the trigger cannot be pulled to fire the gun.

⚠ CAUTION: Even when the safety is "ON" you should continue to handle the pistol safely. Don't point the gun at anything that you don't intend to shoot. **NOTE:** The safety is manual and not automatic. It will only do its job when you do yours. With the index finger out of the trigger area, move the safety to the "SAFE" position-NO RED SHOWING (Fig. 2). **REMEMBER, THE BEST SAFETY IS GOOD GUN HANDLING.**

Step 2. INSERT CO₂ CYLINDER

⚠ WARNING: Use only CO₂ cylinders which are the 12 gram type. Any attempt to use other sizes and/or cylinders containing other types of gas could be extremely dangerous. The use of gases other than CO₂ could result in an explosion or could rupture the gun, causing serious injury.

1. Put "ON" safety - NO RED SHOWING.
2. Remove the butt of the grip by pulling down (Fig. 3).
3. Turn puncture screw counterclockwise until there is enough room to insert a CO₂ cylinder.
4. Insert the small end of the CO₂ cylinder into the grip. Hold the gun in an inverted position with the grip pointing up and the muzzle pointing away from you as shown (Fig. 4).
5. While continuing to hold gun in an inverted position, point the muzzle in a safe direction and turn the puncture screw clockwise to puncture the CO₂ cylinder. (Fig. 5) Continue turning the screw RAPIDLY until finger tight.

NOTE: A slight seepage of CO₂ gas may occur until puncture screw is tight.

⚠ WARNING: Be sure the muzzle is pointed in a safe direction when puncturing the CO₂ cylinder. In the event that a seal temporarily leaks while the CO₂ is being punctured, the CO₂ gas may escape through the barrel. If ammunition is jammed in the barrel from prior shooting, this could result in a projectile being shot.

Step 3. FILL THE BUILT-IN MAGAZINE WITH A MAXIMUM OF 15 BBs

1. Always point gun in a safe direction. Insure that the gun is "ON" safe - NO RED SHOWING (see Operation Step 1).
 2. Move the Built-in Magazine BB follower fully forward and hold in position as shown. (Fig. 6)
- NOTE:** Make sure the follower is held fully forward toward the muzzle of the gun and the spring is clear of the loading port before attempting to load BBs.
3. Once the Magazine BB follower is held fully forward, a maximum of 15 .177 caliber BBs can be individually inserted into the Magazine Loading Port as shown. (Fig. 7)

⚠ CAUTION: Use only Precision Max™ BBs by Daisy®, or similar quality BBs that are labeled as such. Do not use lead pellets, buck shot, darts, ball bearings, or other foreign objects because they can cause injury to someone or may damage and/or jam the pistol.

4. After the Built-in Magazine has been loaded with a maximum of 15 BBs, slowly release the Built-in Magazine BB follower and allow it to rest up against the BBs. This will allow the BBs to be under spring tension (Fig. 8).

Safety "ON" - NO RED SHOWING
Seguridad en "ON" - No Aparece El Rojo
Sécurité activée « ON »
La Couleur Rouge N'est Pas Visible.

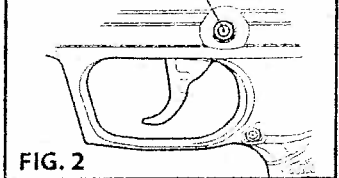


FIG. 2

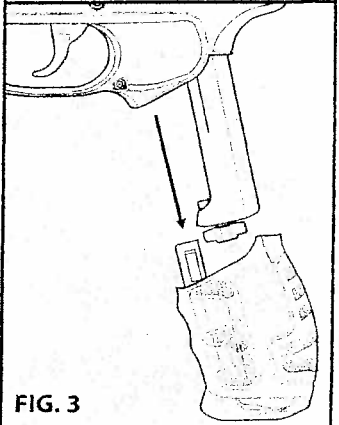


FIG. 3

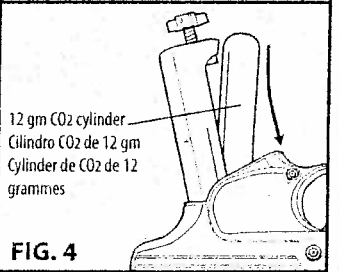


FIG. 4

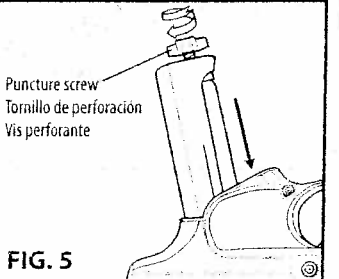


FIG. 5

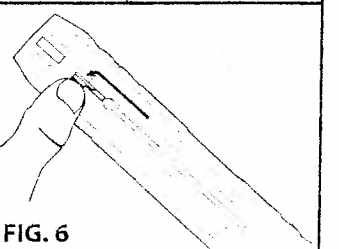


FIG. 6

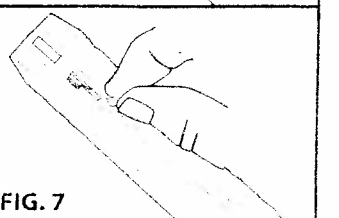


FIG. 7

Slowly Release The Magazine BB Follower
Suelta Lentamente El Elevador Del

proceed through the operating steps (dry firing your gun with CO₂ only several times at a safe target.) This will enable you to learn to operate the PowerLine® 426 properly and safely.

10 SHOOTING SAFETY RULES

WARNING: FAILURE TO FOLLOW THESE RULES CAN RESULT IN SERIOUS INJURY OR DEATH



- 1. Always keep the muzzle pointed in a safe direction.** There are several safe "carries" depending on the situation. NEVER ALLOW THE MUZZLE TO POINT IN THE DIRECTION OF A PERSON.
 - 2. Treat every gun as if it were loaded.** You can never be positive that you were the last person to handle the gun. Never take anyone's word about whether or not a gun is loaded. Always check a gun to see if it is loaded when removed from storage or received from another person. Even if you have fired an airgun one or more times and no pellet or BB was expelled from the barrel, it does not mean that the magazine of the gun is empty of ammunition. Any airgun can fail to feed for any number of reasons. Continue to treat the airgun as loaded and ready to fire. ALWAYS TREAT A GUN AS IF IT IS LOADED EVEN IF YOU KNOW IT ISN'T.
 - 3. Only load or cock a gun when you are shooting.** A loaded gun has no place in your home or other public place.
 - 4. Check your target and beyond your target.** Be sure all persons are well clear of the target area before you shoot. Check behind and beyond your target to be certain you have a safe backstop and that no person or property could be endangered.
 - 5. Anyone shooting or near a shooter should wear shooting glasses.** Also, all other persons should remain behind the shooter.
 - 6. Never climb or jump with a gun.** You can't control the direction of the muzzle if you stumble or fall. You should safely lay the gun down or hand it to a companion while you climb or jump over anything.
 - 7. Avoid ricochet.** Never shoot at a flat hard surface or at the surface of water. Ammunition can ricochet off of water just like a skipped rock.
 - 8. Keep the muzzle clear.** Never let anything obstruct the muzzle of a gun. Don't allow the muzzle to come in contact with the ground.
 - 9. Guns not in use should always be unloaded.** Keeping guns unloaded when not in use is critical to the safety of you and others. When you are finished shooting, put the trigger safety in the "on" position and unload the gun. Store guns so that they are inaccessible to untrained shooters and store ammunition separately from the gun.
 - 10. Respect other people's property.** Whether you're target shooting or hunting, if you're a guest on others' land, you should leave it exactly as you found it.
- Visit www.daisy.com and read the shooting safety rules. Take a quiz and get your "Take Aim at Safety" Certificate.

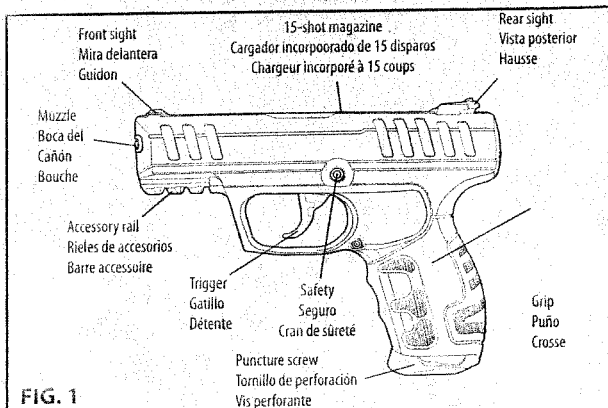


FIG. 1

PRIOR TO OPERATION

Put "ON" safe – NO RED SHOWING (refer to Operation Step 1).

OPERATION STEPS:

WARNING: Be sure gun is always pointed in a safe direction.

- Put "ON" safety - NO RED SHOWING
- Insert CO₂ cylinder
- Fill built-in magazine with a maximum of 15 BBs
- Aim at a safe target
- Take "OFF" safety - RED SHOWING
- Fire
- Put "ON" safety - NO RED SHOWING

The pistol can continue to be shot until the built-in magazine is empty or the CO₂ cylinder need to be replaced. The Model 426 will obtain approximately 150 shots per CO₂ cylinder. Refer to section on CO₂ Characteristics.

tension (Fig. 8).

WARNING: Once the Built-in Magazine is loaded with BBs it is considered to be loaded, so use extreme caution in handling the gun. Keep the gun pointed in a safe direction. Never point the gun at anyone. Always treat the gun as if it were loaded and ready to fire.

Step 4. AIM AT A SAFE TARGET

To be a consistent marksman, use the correct sight picture each time you fire the pistol (Fig. 9).

CAUTION: Due to the power of this CO₂ pistol, use extra caution in selecting a safe target and proper backstop based on the ammunition you're shooting. Never shoot BBs into a steel trap designed for pellets. Pick targets and backstops that will not cause a ricochet or allow the ammo to penetrate the backstop. Never shoot at a flat hard surface or at the surface of water.

Step 5. TAKE "OFF" SAFETY – RED SHOWING.

When you are certain that the target, back stop and surrounding area are safe, position the safety "OFF" - RED SHOWING (Fig 10).

WARNING: Use extreme caution in operating the gun because it is now ready to fire when the trigger is pulled.

Step 6. FIRE

The pistol can be safely fired after properly completing the operating steps mentioned above. After making sure the gun is pointed in a safe direction, gently but firmly, squeeze the trigger. If you desire to continue shooting, the operation steps can be repeated until the CO₂ cylinder requires replacement.

Step 7. PUT "ON" SAFETY – NO RED SHOWING.

After firing, return the safety to the "ON" position – NO RED SHOWING (Fig 2).

BB DOES NOT FIRE

WARNING: If a BB does not fire after completing the operation steps, do not assume that the gun is unloaded. Keep the gun pointed in a safe direction.

CHECK THE FOLLOWING IF A BB DOES NOT FIRE

- Did the Built-in Magazine contain .177 cal. Daisy® Precision Max™ or similar quality BBs? If not, fill the Built-in Magazine with BBs and repeat the operation steps.
- Was the safety "OFF" – RED SHOWING, when the trigger was pulled? If not, repeat the operation steps.
- Was a CO₂ cylinder installed? If not, put "ON" safe – NO RED SHOWING, and insert a new CO₂ cylinder. Repeat the operation steps after the new cylinder is installed.
- Refer to the section on CO₂ characteristics.
- If the pistol still does not fire, refer to warning below.

WARNING: If the pistol still fails to shoot a projectile after checking the five items noted, there is a malfunction in the pistol. This could represent a dangerous condition. There could be a BB in the pistol even though a BB did not shoot out. This could cause the user to mistakenly believe the pistol is unloaded. At no time should you look down the barrel of the gun. Put "ON" safe – NO RED SHOWING, remove the CO₂ cylinder, and send the pistol directly to DAISY® MANUFACTURING SERVICE DEPARTMENT. Refer to section on REPAIR OF POWERLINE® AIR PISTOLS.

HOW TO UNLOAD

After a shooting session is complete, the gun should be unloaded before storing it. To unload the gun always put "ON" safe – NO RED SHOWING, remove the CO₂ cylinder, and remove the BBs from the Built-in Magazine. (See below)

CAUTION: Even though you have gone through an unloading procedure, continue to treat the gun as though it were loaded. Don't point at anything you don't intend to shoot. Always put the gun "ON" safe – NO RED SHOWING.

REMOVE CO₂ CYLINDER

- Put safety "ON SAFE" - NO RED SHOWING (Fig. 2).

Suelte Lentamente El Elevador Del Cargador De BBs Incorporado
Détenre Lentement L'Élévateur Du Chargeur De Balles BB

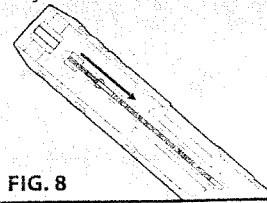


FIG. 8

Correct alignment / Corrija alineacion
Corrija Fimage

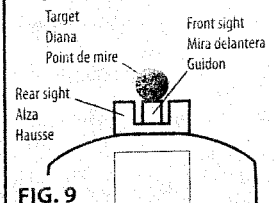


FIG. 9

Safety "OFF" - RED SHOWING
Seguridad en "OFF" - Aparece El Rojo
Eclaira site « DE » du rouge de couleur visible

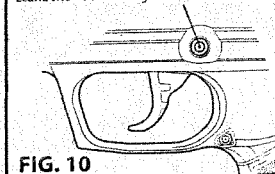


FIG. 10

2. With the butt of the grip cover removed, slowly open the puncture screw until any remaining CO₂ gas is discharged. (Fig.11)

3. Remove the CO₂ cylinder from pistol.
CAUTION: Never attempt to reuse a cylinder for any purpose.

REMOVE BBs FROM THE BUILT-IN MAGAZINE

1. Put "ON" safe – NO RED SHOWING. (Operation Step 1)
2. Push and hold the Built-in Magazine follower fully toward the front.
3. Invert the gun and let the BBs fall out of the magazine through the loading port.
4. Look inside the Magazine slot on top of the gun. If a BB is visible, use a ballpoint pen, screw driver, etc. to remove the BB from the gun as shown (Fig.12).

CAUTION: Do not assume that the gun is empty of ammunition. Even though you have gone through an unloading procedure, continue to treat the gun as though it were loaded. Don't point at anything you don't intend to shoot. Always put the safety "ON" safe – NO RED SHOWING. (Operation Step 1) and always treat the gun as if it were loaded and ready to fire.

CO₂ CHARACTERISTICS

There are occasions when a CO₂ pistol may be subjected to abnormal conditions that can produce effects on the pistol's performance. These conditions include operation and/or storage of the pistol at temperatures that are considerably higher or lower than normal outdoor temperatures (60 – 70 degrees F), as well as conditions of rapid fire.

1. High temperatures can produce pressure in the CO₂ cylinder and gun that is considerably higher than normal operating pressure. Such increased pressure may prevent the pistol from firing and may result in permanent damage to the gun. The maximum operating or storage temperatures should not exceed 105 degrees F (40 degrees C). This temperature can easily be reached if the gun is left directly in the sun on a bright, sunny day. Therefore the shooter should not expose the pistol to high temperature conditions or direct sunlight for any extended period of time.
2. Rapid firing of the gun will cause temperature reduction in the pistol and CO₂ gas. This will result in lower ammunition velocities and may even lower gas pressure enough so that the pistol will not fire. This condition can be especially apparent when shooting in cold weather. This condition can be avoided by allowing more time between shots. This permits the gas to increase in temperature and pressure, and produce normal velocities.
3. During rapid fire, the muzzle velocity of each shot can be expected to decrease. This can be detrimental to shooting accuracy. The faster the gun is shot, the fewer shots you will get per CO₂ cylinder.
4. Care should be exercised to ensure that the gun is not shot with a CO₂ cylinder that is low in pressure because a BB may not be expelled from the barrel.

CAUTION: Shooting the gun with low CO₂ pressure could result in ammunition lodging in the barrel.

STORAGE

Store your pistol unloaded. Put "ON" safe, remove CO₂ cylinder and remove all BBs from the pistol. Keep pistol away from children and untrained shooters. Store ammunition, and CO₂ cylinders separately from the pistol to keep them from untrained shooters.

WARNING: A CO₂ cylinder contains gas under pressure, whether or not it has been inserted into a gun. If exposed to high temperatures (such as inside of a closed car in direct sunlight), it could explode. Be sure to store all cylinders in a cool place.

PROPER CARE

With care and periodic cleaning, your pistol will provide many years of shooting enjoyment. As is the case with conventional firearms, abuse, neglect, and continued exposure to the elements will impair the performance of any airgun. Learn to take care of your pistol and it will serve you well.

CAUTION: Never attempt to clean the pistol until it is "ON" safe – NO RED SHOWING, the CO₂ cylinder has been removed, and the BBs have been removed from the Built-in Magazine.

EXTERIOR PARTS

Any plastic parts may be cleaned with a damp rag and mild soap or detergent. Avoid using strong detergent, abrasive cleaning compounds or solvents that may scratch or otherwise damage surfaces. The exposed metal parts should occasionally be wiped clean using a soft cloth that is lightly oiled with clean motor oil.

LUBRICATION

Your CO₂ pistol was lubricated when built and should not require any additional lubrication.

MODIFICATION

CAUTION: The components of this gun were engineered to deliver optimum performance. Any modification or tampering with a gun may cause a malfunction and may make it unsafe to use. Any change in performance (such as a lowered trigger pull force and shortened trigger travel), indicates possible modification, tampering and/or wear. Such a gun should be inspected, replaced or properly repaired by qualified personnel. Any gun that has been dropped should be checked by qualified personnel to ensure that its function has not been affected.

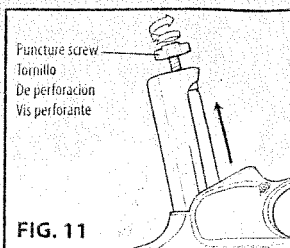


FIG. 11

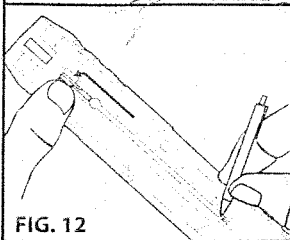


FIG. 12

REPAIR OF POWERLINE® AIR PISTOLS

⚠ WARNING: A pistol that is not operating properly may be dangerous. It should be kept safely from use by anyone until repaired or destroyed. Do not try to take the gun apart. It is difficult to reassemble, and improper reassembly can cause a hazardous condition.

GUNS IN WARRANTY

LIMITED ONE-YEAR WARRANTY. For one year from date of purchase, Daisy® will repair or replace and return this gun, free of charge, if defective in material or workmanship. Service is available by returning the gun to Daisy® Outdoor Products (refer to important note below). Attach to the gun, your name, address, and telephone number, description of problem and proof of date of purchase. Package and send, transportation prepaid, to Daisy®. This Warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. **IMPORTANT:** You can return your inoperative pistol to Daisy® Outdoor Products for repair via United Parcel Service (UPS). Be sure to put "ON safe, remove the CO₂ cylinder and unload all ammunition from the clip before returning the pistol to Daisy®. You must include your street address for Daisy® to send your pistol directly back to you through UPS delivery.

GUNS OUT OF WARRANTY

If your Daisy® Air Gun needs repair, please call 1-800-713-2479 for repair charges. Daisy® will repair the gun or replace it with a reconditioned gun of the same model, if available; otherwise, with a model of equivalent quality. **Daisy® Outdoor Products, Service Department 308 West Stribling Drive, Rogers, AR 72756 U.S.A.**

SPECIFICATION

ACTION	CO ₂ Semiautomatic
CALIBER	.177 cal. (4.5mm) BB
AMMO CAPACITY	15-shot built-in magazine
MAX. SHOOTING DISTANCE*	209 yards / 191 meters
MUZZLE VELOCITY	430 fps / 131 m/s
BARREL	Smooth bore
SAFETY	Manual trigger block
SIGHTS	Blade and ramp front; fixed open rear
WEIGHT	0.9 lbs. (0.40 kg) empty
OVERALL LENGTH	6.875 in. (17.46 cm)
POWER SOURCE	Daisy® 12gm CO ₂ cylinder

*With the muzzle pointed upward at the optimum angle.

⚠ CAUTION: CO₂ cylinders may explode at temperatures above 160°F (71°C).

LEARN TO SHOOT SAFELY

Daisy® Outdoor Products has a rich heritage of teaching young and first time shooters to shoot safely. In order to effectively implement shooting education programs nationwide, Daisy® has partnered with the following organizations which teach shooting safety and provide additional shooting safety materials and information. We encourage you to contact Daisy® at 1-800-643-3458 or one of these organizations to sign up for a shooting safety class in your area.

PROGRAM MATERIALS & EQUIPMENT (U.S. customers only)

- Daisy® Outdoor Products, 800-713-2479, www.daisy.com

PROGRAM INFORMATION

- American Legion Junior Shooting Sports Program, The American Legion, 317-630-1249, www.legion.org/shooting
- Civilian Marksmanship Program, 419-635-2141, www.odcmp.org
- 4-H Club Shooting Sports Programs, Contact your local County Extension Agent
- Junior Olympic Shooting Program, USA Shooting, 719-866-4670, www.usashooting.org
- National Wild Turkey Federation, JAKES Program, 803-637-3106, www.nwrf.org/jakes
- Rocky Mountain Elk Foundation, SAFE Program, 406-523-4500, www.rmef.org

⚠ AVERTISSEMENT: IL NE S'AGIT PAS D'UN JOUET. LA SUPERVISION DES ADULTES EST NÉCESSAIRE. TOUTE MAUVAISE UTILISATION PEUT CAUSER DES BLESSURES GRAVES OU LA MORT. PEUT ÊTRE DANGEREUX À UNE PORTÉE DE JUSQU'À 209 YARDS (191 MÈTRES).

IL S'AGIT D'UN PISTOLET À AIR COMPRIMÉ DE HAUTE PERFORMANCE RECOMMANDÉ POUR UTILISATION PAR DES PERSONNES ÂGÉES DE 16 ANS OU PLUS. LIRE TOUTES LES INSTRUCTIONS AVANT TOUTE UTILISATION. L'ACHETEUR ET L'UTILISATEUR DOIVENT SE CONFORMER À TOUTES LES LOIS RÉGISSANT L'UTILISATION ET LA POSSESSION DES PISTOLETS À AIR COMPRIMÉ.

⚠ AVERTISSEMENT: NE PAS BRANDIR OU MONTRER CETTE CARABINE À AIR EN PUBLIC - CEGESTE POURRAIT TROUBLER LE PUBLIC ET CONSTITUER UN DÉLIT. LA POLICE ET D'AUTRES PERSONNES POURRAIENT LA CONSIDÉRER COMME UNE ARME À FEU. NE PAS CHANGER LES COULEURS ET LE MARQUAGE AUX FINS DE FAIRE RESSEMBLER LA CARABINE ENCORE PLUS À UNE ARME À FEU. CET ACTE EST DANGEREUX ET PEUT CONSTITUER UN DÉLIT.