



REX AND REX-P

User Instruction Manual




⚠ WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 1,000 YARDS.

NOTE: Your air rifle does not come with open sights. You must mount an optical sight before use. Use a good quality mount for best accuracy and proper alignment.

Fill pressure: 220 bar (approximately 3,190 psi)

Contents

Rules of safe shooting	2
Using high pressure air.....	3
Filling your airgun	4
Loading pellets	5
Operating the safety	6
Adjusting the trigger.....	7
Removing the air cylinder.....	7
Maintenance	8
Warranty	9
Warnings	10

 **WARNING:** THIS AIRGUN IS INTENDED FOR USE BY THOSE 18 YEARS OF AGE OR OLDER.

Rules of Safe Shooting

- Never point a gun at anyone or anything, even if you think the gun is unloaded.
- Wear shooting/safety glasses where appropriate and ensure those around you do too.
- Always keep your gun on SAFE until you are ready to shoot safely.
- Always use a safe backstop in a safe location in case the backstop should fail or any pellets pass through it.
- Never load your gun until you are ready to shoot and it is safe to do so.
- Never shoot at hard surfaces, water or anything else that may cause a ricochet.
- Always ensure a gun is on SAFE and unloaded when receiving a gun or giving a gun to someone else. Many accidents are caused by people handling guns that they thought were unloaded and safe!
- Never put a gun away loaded or cocked.
- Always be sure of your target and what lies beyond it in case you miss.
- Never reuse ammunition.
- Ensure you always use the correct caliber ammunition that is suitable for your gun.
- Never rely solely on the safety; the most important safety feature is you!
- Always treat a gun as if it is loaded and with the respect any loaded gun commands.
- Always read and follow the manufacturer's manual and instructions.
- Always make sure you understand how to use any gun before using it.
- Always keep your finger off the trigger and clear of the trigger guard until you are ready to shoot and it is safe to do so.
- Always store the gun in a safe place, unloaded and uncocked, and out of reach of children and unauthorized users.
- Always store ammunition separately from the gun.
- Always abide by laws and regulations that apply to airguns.
- Always use the correct and recommended lubricants, failure to do so may cause injury or damage.

Shooting is one of the safest sports in the world, but misuse and careless use of guns can cause serious injury or death.

ASK, LISTEN, THINK—IF IN DOUBT—DON'T!

Using High Air Pressure

⚠ WARNING: USE ONLY COMPRESSED AIR IN YOUR EVANIX AIRGUN. USE NO OTHER GASES INCLUDING OXYGEN, WHICH CAN CAUSE A FIRE OR EXPLOSION THAT MAY RESULT IN SERIOUS INJURY OR DEATH.

DISCONNECTING THE FILL HOSE FROM THE AIRGUN WITHOUT FIRST BLEEDING THE AIR MAY RESULT IN INJURY FROM HOSE WHIP AS A RESULT OF PRESSURE IN THE FILL HOSE.

DO NOT ATTEMPT TO REPAIR THE AIRGUN OR TO DISASSEMBLE TO CORRECT AN OVERFILL OR VALVE LOCK. PARTS CAN FLY FROM THE AIRGUN AT DANGEROUS SPEEDS WHEN IT IS DISASSEMBLED WHILE PRESSURIZED.

Slowly fill your rifle to a **MAXIMUM of 220 bar (approximately 3,190 psi)**.

Filling the rifle too fast is unsafe and creates excess heat that may result in a low or inaccurate fill pressure.

Do not overfill, as this will damage your gun and result in low power. Such damage is not covered under warranty.

When filling is complete, bleed the excess air using the bleed screw on your fill device. Only then can you safely remove the adapter from the rifle.

Read this entire manual before filling, loading or shooting your gun!

Filling Your Airgun

1) REX: Release the screw on the back stock of gun's air tank to be taken out and Insert the probe in the hole.

REXP : Take the cap out on the back of air tank and insert the probe in the hole

2) Do not use any other type of adapter other than the one supplied with the rifle.

3) Slowly fill the rifle to a **MAXIMUM of 220 bar (approximately 3,190 psi) pressure.**

4) Filling the rifle too fast creates excess heat, and the gauge may temporarily show an artificially high pressure level. After the reservoir has cooled, the gauge may show a lower pressure level.

5) Do not overfill, as this will damage the gun and result in low power. Such damage is not covered under warranty.

6) When charging is complete, bleed the excess air using the bleed screw on your fill device and remove the adapter from the rifle.

REX



REX-P




! WARNING: DO NOT LET THE PRESSURE IN YOUR RESERVOIR DROP BELOW 100 BAR (APPROX. 1450 PSI) BECAUSE THERE MAY NOT BE ENOUGH PRESSURE TO CLOSE THE BOLT VALVE, AND ALL REMAINING AIR WILL LEAK OUT. THE GUN WILL HAVE TO BE SENT IN FOR REPAIR.

! WARNING: USE ONLY COMPRESSED AIR IN THIS AIRGUN. USE NO OTHER GASES—INCLUDING OXYGEN, WHICH CAN CAUSE A RE OR EXPLOSION THAT MAY RESULT IN SERIOUS INJURY OR DEATH. DISCONNECTING THE FILL HOSE FROM THE AIRGUN WITHOUT BLEEDING THE AIR FIRST MAY RESULT IN INJURY FROM HOSE WHIP AS A RESULT OF PRESSURE IN THE FILL HOSE. DO NOT ATTEMPT TO REPAIR THE AIRGUN OR TO DISASSEMBLE TO CORRECT AN OVERFILL OR VALVE LOCK. PARTS CAN FLY FROM THE AIRGUN AT DANGEROUS SPEEDS WHEN IT IS DISASSEMBLED WHILE PRESSURIZED.

Loading Pellets

1) Stage before cocking

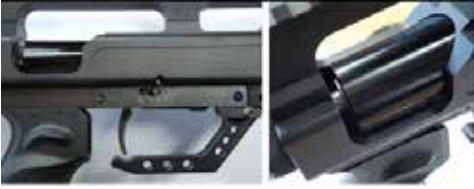

2) Stage after cocking (push under lever forward)



3) Insert pellet, push to breech of barrel and properly seat pellet



4) Find the automatic safety lock on the cocking lever. Once cocked, pull the safety lock to release the lever in order to close the breech.



! WARNING: KEEP YOUR FINGER OFF THE TRIGGER WHILE COCKING THE AIR RIFLE.

Operating the Safety

1) To activate the safety, push the safety catch lever rearward to the “S” (SAFE) position. When the safety is engaged, the trigger is locked and the rifle cannot be fired. To disengage the safety and fire the rifle, push the safety lever forward to the “F” (FIRE) position.



S = Safe, F = Fire

Please use caution when decocking the air rifle, a pellet may still be in the breech.

In addition to the safety catch, a loaded and cocked rifle can be made safe by decocking (uncocking). To decock the rifle, first pull the lever down and push it forward to the open position, exposing the breech. Next, remove the pellet from the breech. While holding the cocking lever, squeeze the trigger and let the lever return forward under your control. The rifle is now decocked.

When not in use, the rifle should be unloaded and uncocked. Leave the bolt closed and uncocked when not in use.

To prevent unauthorized use, store pellets separate from the rifle.

! WARNING: KEEP THE AIR RIFLE ON SAFE UNTIL YOU'RE READY TO SHOOT, THEN PUSH THE SAFETY OFF.

Adjusting the Trigger

1) Make sure the rifle is unloaded by removing pellet ensure there are no pellets in the breech. Put the gun on SAFE.

2) Using a 0.89 mm Allen key, turn the screw clockwise to decrease trigger pull weight and counterclockwise to increase trigger pull weight.



Please use caution when adjusting the screw.

Adjusting the screw too far counterclockwise can create a potentially dangerous situation for your rifle or pistol, or can keep the gun from cocking.

Removing the Air Cylinder

1) Remove the scope rail by removing the two allen screws on the top of the rail (1a). Turn both screws counter-clockwise until the rail can be lifted off of the gun (1b).



2) Loosen the cylinder securing screw by turning counter-clockwise.



3) Once the securing screw is loose, turn the cylinder counter-clockwise by hand to remove it.



Maintenance

Clean your rifle's exterior with a good quality silicone product. Apply the silicone to a lint free cloth and then wipe down the rifle's exterior.

Do **NOT** leave the air filler hole exposed. Always replace the protective cover when not filling the gun with air.

Do **NOT** rely solely on the safety to provide guaranteed safety. YOU are the ultimate safety for your gun.

Do **NOT** leave pellets loaded in the breech of the rifle.

Do **NOT** fill the rifle quickly with air. If it is charged too quickly, it can dislodge the valve from its seat, cause excess heat buildup and give inaccurate fill pressure readings.

Do **NOT** overfill the rifle beyond the fill pressure stated on the front of this manual. Overfilling the gun could be dangerous, damage the rifle, deliver substandard performance and cause it to malfunction.

Do **NOT** use mineral-based oils or greases.

Do **NOT** use petroleum-based oils or greases.

Do NOT use this rifle until you have read and understood this owner's manual.

In the unlikely event your rifle malfunctions or exhibits reduced performance, DO NOT attempt to fix the problem yourself. Please call Air Venturi so we can address any issues or have you return the gun for repair.

Air Venturi service line: 216-220-1180

Warranty

One-Year Limited Warranty

This product is warranted to the retail consumer for one year from date of retail purchase against defects in material and workmanship. In the unlikely event there are any defects in materials or workmanship in the first twelve (12) months after retail purchase, we will repair or replace the defective items under warranty.

What is covered:

Replacement parts and labor. Transportation charges to consumer for repaired product.

What is NOT covered:

- Transportation charges to Air Venturi for defective products.
- Any damage or faults caused by owner misuse, action or inaction.
- Damages caused by abuse or failure to perform normal maintenance.
- Any other expense.
- Parts subject to normal wear and tear.
- Consequential damages, incidental damages or incidental expenses including damage to property.

This warranty is in addition to your statutory rights. Retain your sales receipt as proof of purchase.

NOTE: *Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.*

Warranty claims:

Call Air Venturi at **216-220-1180** before returning any product.

Implied warranties:

Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one year from date of retail purchase.

NOTE: *Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.*

To the extent any provision of this warranty is prohibited by federal, state or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country. Illustrations and photographs are for information purposes only and may not show the exact model purchased.

The warranty shall be invalid if the product:

- Has been incorrectly disassembled, reassembled or maintained.
- Has been fitted with non-Air Venturi parts.
- Has been abused, misused or improperly stored.
- Original purchase receipt cannot be presented.

Warnings

⚠ WARNING: NOT A TOY. ADULT SUPERVISION REQUIRED. MISUSE OR CARELESS USE MAY CAUSE SERIOUS INJURY OR DEATH. MAY BE DANGEROUS UP TO 1,000 YARDS.

This airgun is intended for use by those 18 years of age or older.

- Do not inhale dust from lead pellets or put lead pellets in the mouth. Wash hands after handling lead. Lead pellets contain lead, a chemical known to the State of California to cause cancer and birth defects (or other reproductive harm).
- Use only dry, filtered compressed air in this gun. Use no other gas, including oxygen, which can cause a fire or explosion that may result in serious injury or death.
- Keep the air rifle on SAFE until you're ready to shoot, then push the safety OFF. Keep your finger off the trigger while cocking the air rifle.
- Use the correct pellet size for your Evanix rifle model. Never reuse pellets. The use of any other kind of ammunition can cause injury to you or damage to your rifle.
- Do not assume your gun is unloaded if it fails to fire properly!
- Never leave your airgun loaded.
- Use only compressed air in this airgun. Use no other gases—including oxygen, which can cause a fire or explosion that may result in serious injury or death.
- Disconnecting the fill hose from the airgun without bleeding the air first may result in injury from hose whip as a result of pressure in the fill hose.
- Do not attempt to repair the airgun or to disassemble to correct an overfill or valve lock. Parts can fly from the airgun at dangerous speeds when it is disassembled while pressurized.

Do NOT exceed maximum fill pressure of 220 bar at room temperature!



- When filling the compressed air cylinder, the compressed air must NOT contain oil, water or any other contaminant.
- Compressed air cylinders must NEVER be opened or modified mechanically by unauthorized specialists.
- The compressed air cylinder must be protected from forceful impacts. Compressed air cylinders are NOT intended for transport of other gases.

Air venturi

The Power of Air

AIR VENTURI

5135 Naiman Parkway, Cleveland, OH 44139

216-292-2570 • fax 216-373-0086