



POCKET HUNTER™

OWNER'S MANUAL

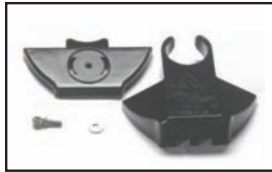

The Pocket Hunter (#3075) System consists of the Marksman Folding Slingshot, High Power bands with paracord and pouch and 2-piece molded adapter (with thumb screw and washer).

Steps 1, 2 and 3 are only necessary if unit is disassembled. If already assembled skip to step 4.

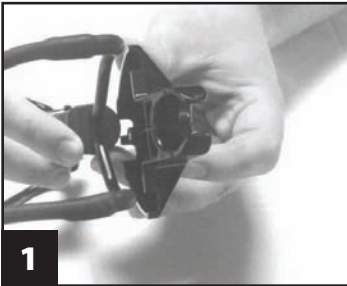

Step 1: Take the front piece and place on one side of the forks of the slingshot.



Step 5: Remove index finger from the arrow, pull back the pocket slowly by using the Paracord loop (see picture 5) until arrow is fully secure in the pocket.



Step 2: Take back piece and place on the other side of the forks of the slingshot.



Step 6: Once the arrow is fully secure in the pocket then you are ready to take aim.



Step 3: Take the washer and thumb screw and attach the two pieces together until screw is snug. DO NOT over tighten.



Steps 7 & 8: To aim, pull the Paracord loop to full extension as shown in pictures #7 & #8 and site in your target by looking down the arrow shaft. Once you have your target sited then release your finger from the Paracord loop.



Step 4: To load the arrow put the arrow in the arrow rest. Use index finger to secure arrow and with other hand push the Paracord into the arrow nock. See picture #4.



 **MARKSMAN® PRODUCTS**
DIVISION OF S/R INDUSTRIES, INC. Santa Fe Springs, CA 90670, U.S.A.

MARKSMAN PRODUCTS
10652 Bloomfield Ave
Santa Fe Springs, CA 90670 USA
(562)968-5892 • Fax (562)968-5823



Pocket Hunter Safety Rules:

1. Always wear protective eyewear. Never shoot at hard surfaces. Always be mindful of ricochet or bounce back. Make sure all spectators or people within range are also wearing protective eyewear.
2. Always be sure the area behind your target is safe. If you need to use a backstop, place it in a location that will be safe in case it should fail. Always examine the backstop, and if it becomes worn or damaged, replace it immediately!
3. Never aim at people, windows, or anything else that could result in personal injury or physical damage. Serious injury or damage can occur. Always use proper targets.
4. Before each shooting session, inspect thrust bands for wear, brittleness, or signs of breaking. Never use damaged or worn bands, replace them immediately!



MARKSMAN PRODUCTS
10652 Bloomfield Ave
Santa Fe Springs, CA 90670 USA
(562)968-5892 • Fax (562)968-5823