


INSTALLATION INSTRUCTIONS

BATTERY COMPARTMENT

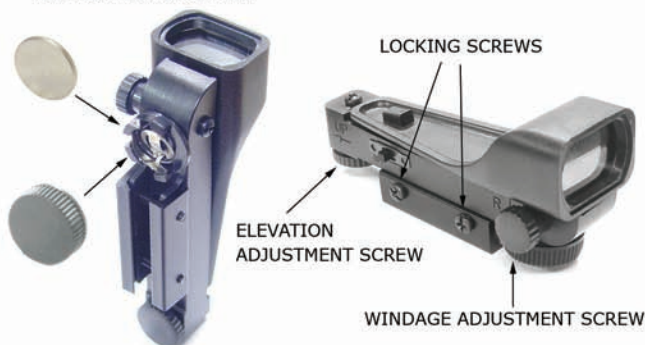

NOTE : Be sure your firearm is UNLOADED

Mounting:

1. Loosen locking screws and fit the mount base onto the .22/airgun rails or Weaver rails.
2. Hold the firearm in natural shooting position and adjust the scope eye relief until achieving a full field of view.
3. Tighten locking screws to ensure a firm grip onto the firearm.

Zeroing:

1. Place a target at an appropriate distance.
2. Switch on the electronic dot, aim at the center of the target and fire a test shot.
3. If the pellet hit the center of the target, the dot sight was zeroed. If it didn't, adjust the dot using the elevation and/or windage adjusters as follows:
 - a. Vertical Adjustment (Elevation) - Turn the elevation adjustment knob clockwise to move the point of impact up and counterclockwise to move the point of impact down.
 - b. Horizontal Adjustment (Windage) - Turn the windage adjustment knob clockwise to move the point of impact left and counterclockwise to move the point of impact right.
4. Keep adjusting and test-firing until the test shot hits the center of the target.

Made In China