

- **NEVER** shoot at hard surfaces, water or anything else that may cause a ricochet.
- This airsoft gun may only be used where your local laws permit or at shooting ranges allowed by the law, and only if the ammunition does not travel further than the shooting area. Keep in mind the maximum range of the ammunition. **ALWAYS** abide by laws and regulations that apply to airsoft guns.
- **ALWAYS** check to see if the airsoft gun is **ON "SAFE"** and unloaded when getting it from another person or from storage.
- **ALWAYS** keep your finger off the trigger and away from the trigger guard until ready to shoot.
- You and others with you should **ALWAYS** wear safety shooting glasses to protect your eyes.
- If your reading or prescription glasses are not certified safety glasses, make sure you wear shooting glasses over your regular glasses.
- **NEVER** load your airsoft gun until you're ready to shoot and it's safe to do so.
- **ALWAYS** use the correct caliber ammunition that is suitable for the airsoft gun. Use **ONLY** ammunition designed for this airsoft gun.
- **NEVER** reuse ammunition.
- **ALWAYS** store the airsoft gun with the safety **ON "SAFE"**, unloaded, uncocked, separated from the ammunition, out of the reach of children, and in a secure location to prevent unauthorized people from accessing it.
- **DO NOT** attempt to disassemble or tamper with the airsoft gun.
- **ALWAYS** store this airsoft gun in a safe location.
- **ALWAYS** store ammunition separately from the gun.
- **ALWAYS** unload the airsoft gun before giving it to someone else.
- **ALWAYS** read and follow the manufacturer's manual and instructions.
- **NEVER** let a person who has not completely read this manual use this product.

**Perform routine inspection and maintenance, including:**

1. Modification of the gun mechanism may cause a gun to malfunction and tampering with a gun may make it unsafe to use.
2. Any change in the performance, such as lowered trigger force and shortened trigger travel, indicates a possible wear and that such guns should be inspected, replaced, or properly repaired, and repairs should only be made by qualified personnel.
3. Check any gun that has been dropped to ensure that its function has not been affected.

**LIMITED 30 DAY WARRANTY**

This product is warranted to the retail consumer for 30 days from date of retail purchase against defects in material and workmanship and is transferable.

**WHAT IS COVERED**

Replacement parts and labor. Transportation charges to consumer for repaired product.

**WHAT IS NOT COVERED**

Transportation charges to Air Venturi for product. Damages caused by abuse or failure to perform normal maintenance. Any other expense. **CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

Warranty claims: Call Air Venturi at 216-220-1180 before returning any product.

Implied warranties: Any implied warranties, including the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to one year from date of retail purchase.

**NOTE:** Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. To the extent any provision of this warranty is prohibited by federal, state or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country. Illustrations and photographs are for information purposes only and may not show the exact model purchased.

The warranty shall be invalid if the Airgun:

- Has been incorrectly disassembled, reassembled or maintained.
- Has been fitted with non-Air Venturi parts.
- Has been abused, misused or improperly stored.
- Original purchase receipt cannot be presented.

Air Venturi, 5135 Naiman Parkway, Cleveland, OH 44139

# TSR REVOLVER

## Spring Action 6mm Airsoft

 
# USER MANUAL




<b>! WARNING !</b>	
<b>18 YEARS OR OLDER!</b>	<ul style="list-style-type: none"> <li>THIS IS NOT A TOY. MISUSE MAY CAUSE SERIOUS INJURY OR DEATH. EYE PROTECTION DESIGNED FOR AIRSOFT GUNS MUST BE WORN BY THE USER AND ANY PERSON WITHIN RANGE. READ THE OWNER'S MANUAL BEFORE USING. MAY BE DANGEROUS UP TO 100 YARDS (91.44 METERS).</li> </ul>
<b>INJURY CAUTION!</b>	<ul style="list-style-type: none"> <li>DO NOT BRANDISH OR DISPLAY THIS GUN IN PUBLIC - IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM. DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THAT IS DANGEROUS AND MAY BE A CRIME.</li> </ul>
<b>IMPORTANT!</b>	<ul style="list-style-type: none"> <li>BUYER AND USER HAVE THE RESPONSIBILITY TO OBEY ALL LAWS ABOUT THE PURCHASE, USE AND OWNERSHIP OF THIS GUN. ADULT SUPERVISION REQUIRED.</li> </ul>
<b>CHOKING HAZARD!</b>	<ul style="list-style-type: none"> <li>KEEP AWAY FROM SMALL CHILDREN.</li> </ul>

The TSD Spring Airsoft Revolver is a high quality spring action, single shot revolver. The user manual will ensure you have the best experience possible with your new airsoft revolver. When using this product, please pay extra attention to your surroundings and playing environment. Please read the Warnings before proceeding. The manufacturer will not hold any responsibilities for any accident, or malfunction which is caused by improper handling, illegal conversion, alteration or disassembly of this product. Please read the User Manual thoroughly before operation.

## Components


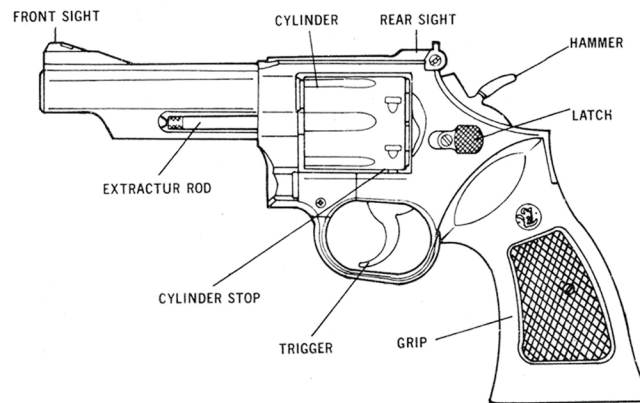


## Instructions

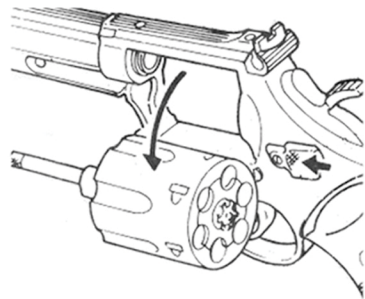 



1. Push the latch forward, then turn out the cylinder, as shown.

2. Load the BB into the back of the shells until the BB is flush. Insert only 1 BB per shell.

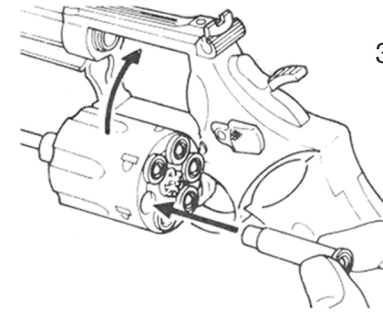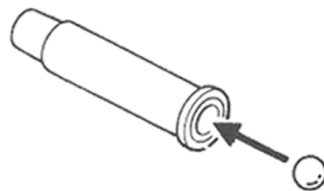


3. After loading all 6 shells, return to cylinder and close cylinder until it locks back into position.

4. Cock the hammer until locked. Gun is now ready to fire. Pull trigger to fire.

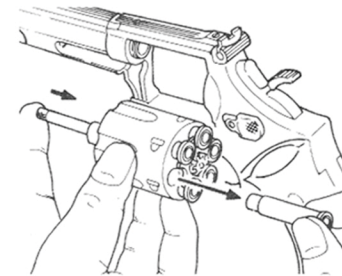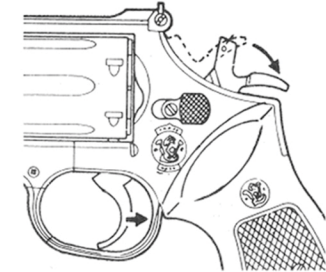

5. After exhausting the 6 rounds, pull out the cylinder and use the extractor rod to remove the shells.

**SAFETY:** When the safety latch is pushed back, the safety is engaged and the hammer cannot be cocked.  
**IMPORTANT:** Do not force cock the hammer when the safety is engaged as this may cause damage to your gun.

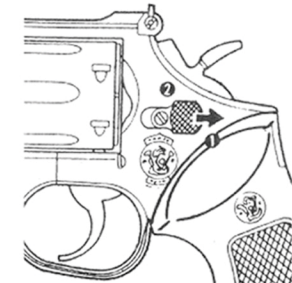

## Rules of Safe Shooting

- **NEVER** point the airsoft gun at any person.
- **NEVER** point the airsoft gun at anything you do not intend to shoot.
- **ALWAYS** treat the airsoft gun as if it was loaded and handle it with the same respect you would a firearm.
- **ALWAYS** aim in a **SAFE DIRECTION**. **ALWAYS** keep the muzzle pointed in a **SAFE DIRECTION**.
- **NEVER** put any part of your hand over the muzzle.
- **ALWAYS** keep the airsoft gun on "**SAFE**" until you are ready to shoot in a **SAFE DIRECTION**.
- Check behind and beyond your target to be certain you have a safe backstop and that no person or property can be endangered.
- Place the backstop in a location that will be safe should the backstop fail.
- Replace the backstop if it becomes worn.
- **ALWAYS** be sure of your target and what lies beyond it in case you miss.