

# UTG

## UTG RED/GREEN DOT SCOPE



# OWNER'S MANUAL



### 1. Mounting The Scope

**CAUTION:** Always ensure your rifle is UNLOADED, UNCOCKED and, where fitted, the safety catch is applied before fitting the scope. Practice safe handling procedures at all times.

- Locate a proper mounting position on your rifle.
- Loosen the Mounting Screws from the Ring Mounts.
- Install and adjust the Scope at a proper position to suit your shooting preference, then tighten the Screws.
- The Scope is now ready to be zeroed.

### 2. Zeroing Scope

The purpose of zeroing the scope is to ensure that the scope is aligned with the impact point of the pellet or bullet from the rifle.

- 1 Place a target 100 yards away (25 yards for airgun scopes).
- 2 Ideally use a steadying device such as a bipod or shooting stand, aim at the center of the target and fire a test shot, if safe to do so.
- 3 If the impact point of the pellet or bullet is exactly in the center of the target then the scope is zeroed. If it is not, you will need to adjust the reticle using the elevation and / or windage
  - 1) Vertical Adjustment (Elevation) - Unscrew the protective cover on the top of the scope. Use your fingers to turn the adjusting knob as required. One click in either direction equals approximately 1/4 inch at 100 yards. Re-attach and tighten the protective cover.
  - 2) Horizontal Adjustment (Windage) - Unscrew the protective cover on the right side of the scope. Use your fingers to rotate the adjusting knob as required. One click in either direction equals approximately 1/4 inch at 100 yards. Re-attach and tighten the protective cover.
- 4 Having adjusted the windage and elevation as required, fire, if safe to do so, another test shot. Keep adjusting and test firing until the test shot impacts on the center of the target when the reticle is on the center of the target. This can seem a tedious process but is vital for

### 3. Battery Replacement

The battery is housed inside the Power Switch.

- Firmly holding the Power Switch in one hand.
- Open the battery compartment cap by uncrewing the cap with a coin or any thin metal.
- Remove the battery and install the new one.
- Replace the cap and fasten it with a coin or any thin metal.

### 4. Care and Maintenance:

- 1 Take care not to drop or knock the scope once it is zeroed.
- 2 Keep the protective lens covers in place when the scope is not being used.
- 3 Maintain the metal surface of the scope by removing any dirt or sand with a soft brush so as to avoid scratching the finish.
- 4 Wipe the lens with a clean flannel cloth to keep it clean and dry. In order to avoid scratching the glass, ensure both the lens and cloth are clean.
- 5 Store the scope in a cool dry place when not in use. Be careful to avoid contact with acid, alkaline or corrosive chemicals.
- 6 Do not attempt to lubricate any part of the scope.
- 7 Do not disassemble the scope. Do not loosen or remove screws or parts. Any such or similar actions will void the warranty.



30mm Premium Tactical Red/Green Dot SCP-RD30RGWL



30mm Premium Tactical Red/Green Dot SCP-RD30RGDL

30mm Premium Commando Red/Green Dot SCP-RD30RGWS

30mm Premium Commando Red/Green Dot SCP-RD30RGDS

| Model | Magnification | Tube Dia. | Objective Dia. | Field of View @100 yards | Eye Relief | Exit Pupil | Click Value @100 yards | Length | Weight | Parallax Setting | Batteries |
|-------|---------------|-----------|----------------|--------------------------|------------|------------|------------------------|--------|--------|------------------|-----------|
|       |               |           |                |                          |            |            |                        |        |        |                  |           |
|       |               |           |                |                          |            |            |                        |        |        |                  |           |

SPECIFICATIONS